

WASH BRUSH

Wash brush with soft bristles for cleaning sensitive areas and areas which are difficult to access in the outside area. Suitable for all Kärcher K 2 to K 7 pressure washers.



Order no.

6.903-276.0

Technical data

EAN code		4002667004564
Weight	kg	0.2
Weight incl. packaging	kg	0.2
Dimensions (L × W × H)	mm	333 × 82 × 164



Extra soft bristles

- Enables cleaning of sensitive areas

COMPATIBLE MACHINES

- K 2 Battery
- K 7 Premium Smart Control
- K 5
- K 5
- K 5 Compact *MX
- K 5 Basic
- K 5 UM Car
- K 5 Premium Smart Control
- K 5 Premium Smart Control Home
- K 5 Premium Smart Control Car&Home
- K 5 Premium Smart Control
- K 5 Power Control
- K 5 Power Control
- K 5 Premium Silent Home 60Hz
- K 5 Premium Silent 60 Hz
- K 5 Smart Control
- K 5 Premium Power Control Home
- K 4
- K 4 Car
- K 4
- K 4 Premium
- K 4 Premium Car
- K 4 Universal Edition
- K 4 Universal Edition
- K 4 Universal Edition
- K 4 Compact *MX
- K 4 Premium Power Control
- K 4 Power Control
- K 4 Power Control
- K 4 Power Control Car
- K 4 Premium Silent Veranda 60Hz
- K 3.30
- K 3
- K 3 Home
- K 3 Car & Home
- K 3 Home T 150
- K 3
- K 3 Car *MX
- K 3 *GB
- K 3 Home *GB
- K 3 Car *EU
- K 3 Home & Pipe
- K 3 Premium
- K 3 Follow Me
- K 3 Follow Me
- K 3 Follow Me *MX
- KHP 3 *EU
- K 3 Power Control
- K 3 Power Control Home
- K 3 Power Control
- K 3 Power Control
- K 3 Power Control
- K 3 Power Control
- K 3 Power Control Home
- K 3 Power Control Home T 5
- K 3 Power Control Car & Home
- K 3 Power Control Home & Pipe
- K 3 Premium Power Control
- K 3 Premium Power Control Home
- K 3 Premium Power Control Car & Home
- K 3 Premium Power Control Home
- K 3 Induction
- K 3 Compact
- K 3 Compact
- K 3 Compact Home
- K 3 Compact Home
- K 3 Compact *MX
- K 2.68 M
- K 2.20 M
- K 2.050
- K 2.350
- K 2.360
- K 2.360
- K 2 CCK
- K 2 Basic
- K 2 HOME T150 *EU
- K 2 Car
- K 2 Telescopic
- K 2
- K 2 Plus
- K 2
- K 2 Car
- K 2 HOME T150 *GB
- K 2 Compact
- K 2 SILENT UM
- K 2 Classic
- K 2 Classic *MX
- K 2 Classic
- K 2 Home *MX
- K 2 KHP
- KHP 1
- K 2 Compact
- K 2 Compact
- K 2 Compact Home
- K 2 Compact Home
- K 2 Compact Car
- K 2 Compact Car *GB
- K 2 Compact Car & Home
- K 2 Compact Car & Home
- K 2 Compact Car & Home
- K 2 Compact Car & Home
- K 2 Compact
- K2 Follow Me Cordless *KAP
- K 2 Universal Edition
- K 2 OPP *GB
- K 2 Universal Edition OJ
- K 2 OPP Car *GB
- K 2 Universal Edition Home
- K 2 Universal Edition Home*GB
- K 2 Universal Edition FJ
- K 25 Silent Limited Edition
- K 25 Silent Limited Edition
- K 2 Horizontal *MX
- K 2 Premium Power Control
- K 2 Premium Power Control
- K 2 Premium Power Control
- K 2 Premium Power Control Home
- K 2 Power Control
- K 2 Power Control
- K 2 P
- K 2 F
- K 2 P
- K 2 U
- K 2 U
- K 2 U
- K Mi
- K Mi
- K Mi
- K Mi
- K Mi
- K2 F
- K Mi
- K 2
- K 3
- K 3
- K 3
- K 3
- K 3
- K 2
- K 3
- K 3
- K 3
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2
- K 2

ACCESSORIES FOR WASH BRUSH 6.903-276.0



		Order no.	Description	
BRUSHES				
Garden hose adapter	1	2.640-732.0	Adapter for garden hose connection - suitable for attaching all Kärcher brushes to garden hoses with the quick-coupling system.	<input type="checkbox"/>

Available accessories.